

Plano Model Products #12121 - Boxcar Ladders Set#1 7 Rungs - 18" Space - 18" Rungs - Offset End Mounts

Fill any holes and/or remove ladders from your model.

About the drill templates - As labeled, there is a side template and an end template. The "V" points to a line that signifies the bottom edge of the ladder. Cut out template close to "+" marks and position on car where new ladders will be mounted. Drill a #78 hole in each "+" mark.


Before removing the ladders from the frets, look closely at both sides. You will notice one side has half etched fronts with a dividing lines to the sides. These are the fold lines. Remove a ladder from the fret, close to the fret so mounting pins remain on the ladder legs. Refer to image on the back as to what these should look like after trimming from fret. Carefully bend the ladders sides back, away from the half etched fronts, 90 degrees. A couple pair of tweezers should work, holding close the fold line and working slowly. The top of the end ladders will need to be rolled back slightly to match the curved sides.

Insert mounting pins into drilled holes and cement in place. Repeat with remaining ladders. Touch up paint if needed.

Thank you for using our ladders on your model! See your local hobby supplier for all of our photo etched details or visit us online.

www.planomodelproducts.com

roll top back to
match curve of sides

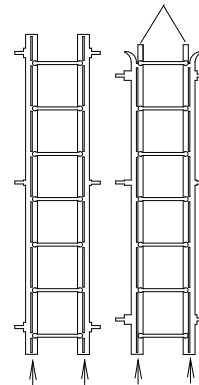

bend 90 degrees at
these bend points